

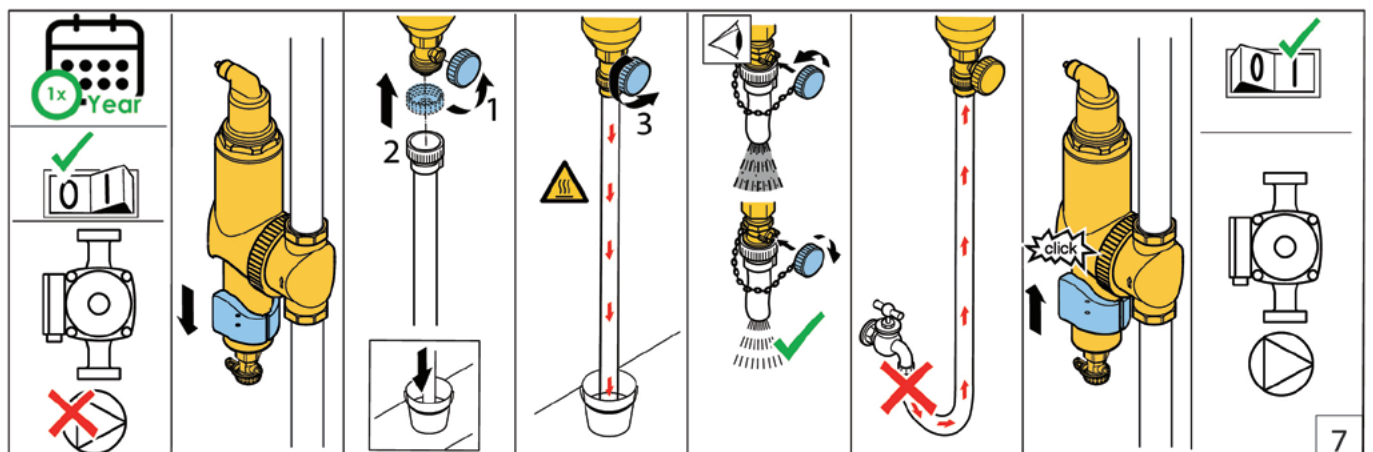
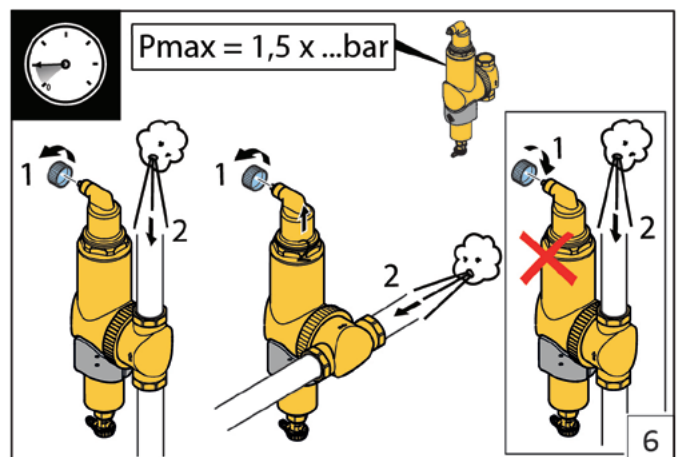
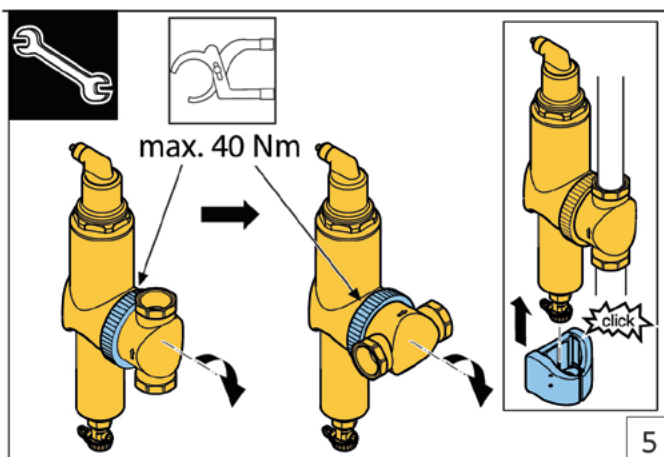
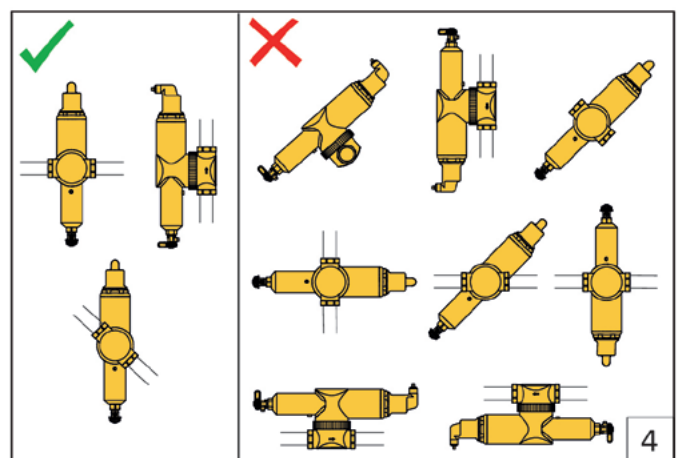
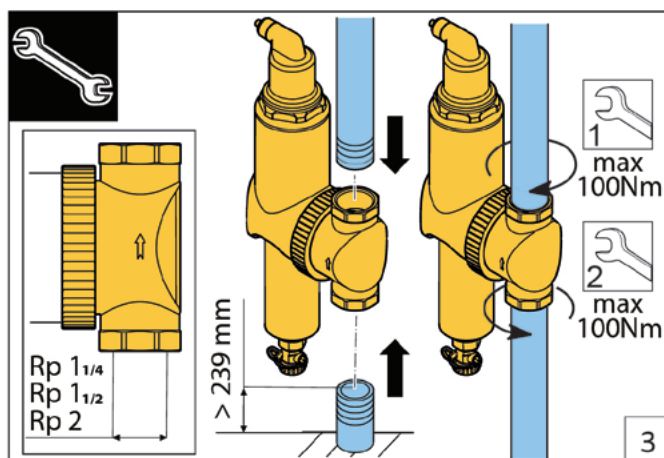
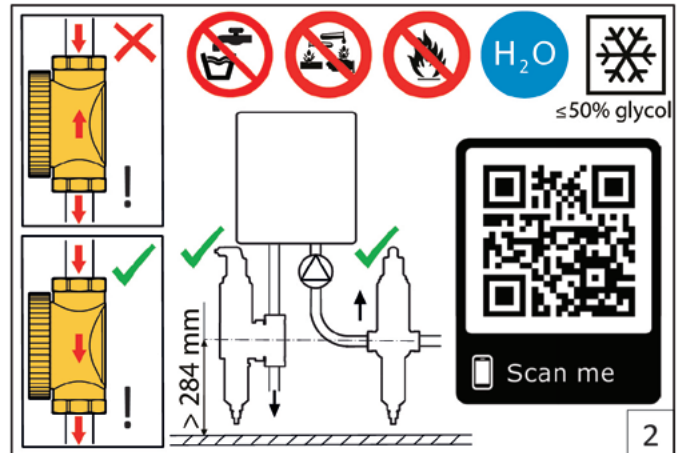


For articles UC125WJ UC150WJ UC200WJ

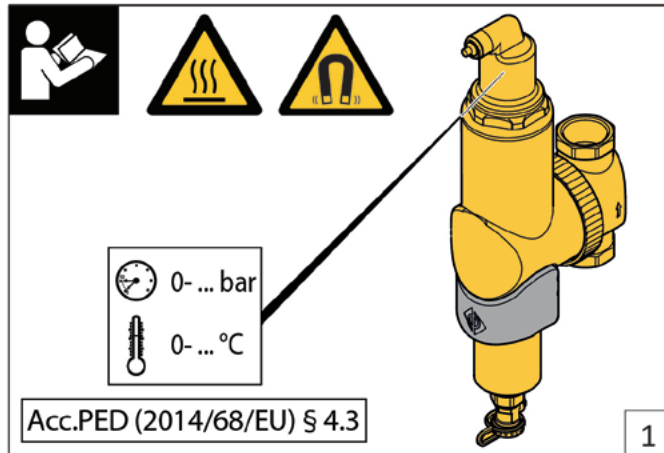

Installation and operating instruction
Installations- und Betriebsanleitung
Montage- en bedieningsvoorschriften

Instructions d'installation et d'utilisation
Instrucciones de instalación y uso
Istruzioni per l'installazione e l'uso

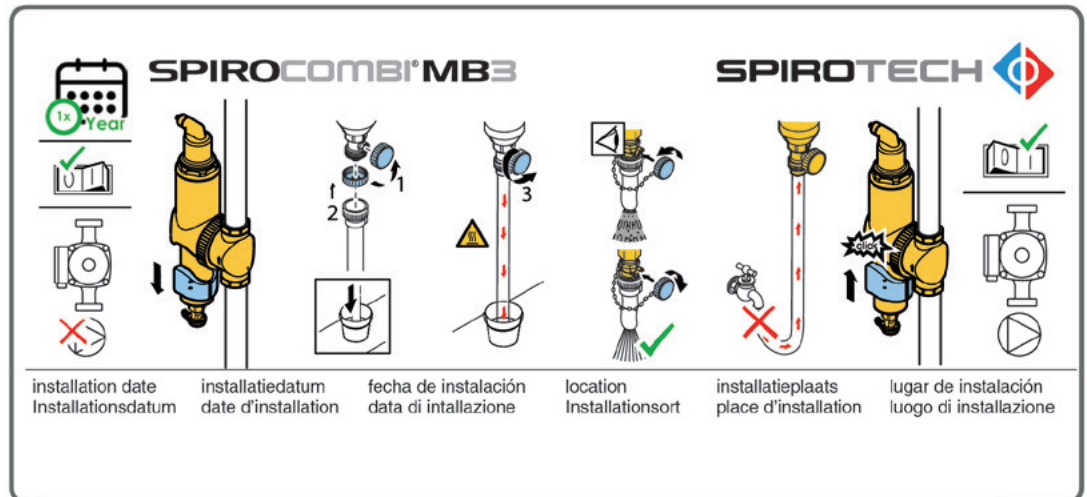

Air and Dirt separator
Luft- und Schlammabscheider
Lucht- en Vuilafscheider

Séparateur d'air et de boues
Separatore d'aria e di impurità
Separador de aire y lodos

UC...WJ

